

EASY AS 1-2-3




How To...

1


Connect (screw-on) an adaptor to the manifold until completely snug.

Available adaptors - CGA 346, CGA 347, Scuba, 1/4 NPT

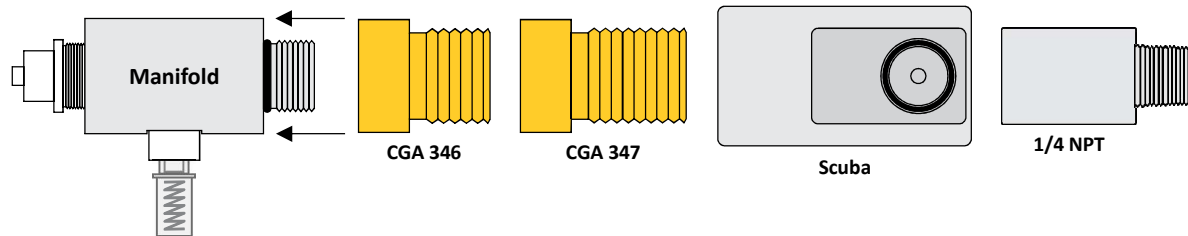

2


Important: Remove both **RED** caps from sample bag. (under box insert or in service kit)
Connect (push in snug) sample bag to the manifold with adaptor.

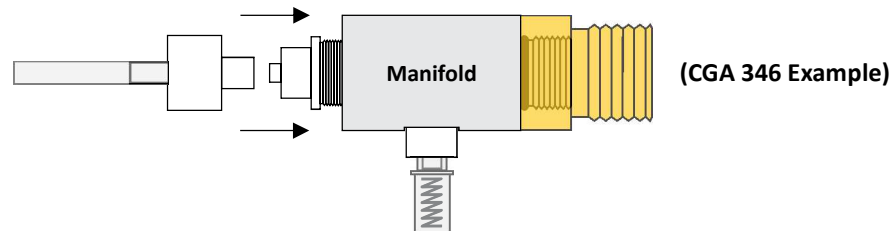

3

Connect manifold with sample bag and adaptor to your source and flow for 3 minutes.

* You will hear some air venting out of the vent valve and bag outlet, this is normal.

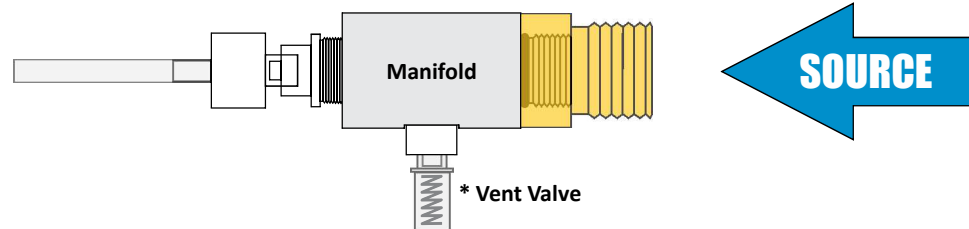

When 3 minutes are complete, shut off source, disconnect manifold, adaptor and sample bag.
Replace (**GENTLY: push-in for inlet, screw-in for outlet**) both **RED** caps back onto the sample bag.
Fill out information card and ship back to SLP. (see various shipping instructions on our website)

**** DO NOT EXCEED 2500 PSI ****
WARNING: Adaptors are for use in SLP test kits ONLY