


Adapter Instructions

Scott 805059-01 For use with Scott AV2000/AV3000

Please follow instructions when using Scott adapter 805059-01 adapter with OHD part 9513-0130 Kit #1 fit test adapter.

The transparent Inhalation valve (1) must be removed from the Scott adapter. This valve is permanently attached, so you must use a needle-nose pliers to grab the diaphragm to remove it.

Please note that the foam-rubber seal on the adapter (2) that creates the actual seal against the mask will eventually wear out. It is recommended that you have a back-up adapter and plan to replace the adapter each year.

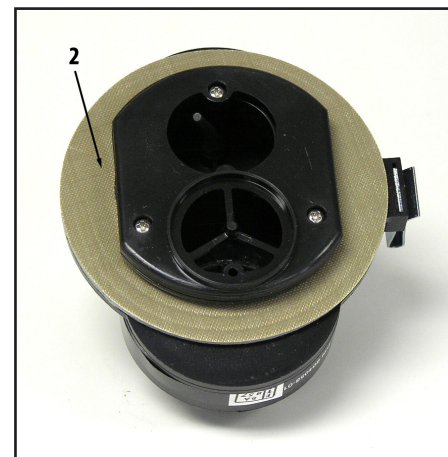

Öã cã cãã^ ÖÖÁQ cã } æã } æÁQ &
ÚUÁQJ cÁ JI ÁÖ^T [c^ ÁÍ H€
ì €€ÈÌ GÈGHÁG FJÈÌ Ì ÈÌ G ÁÁæÁ G FJÈÌ Ì ÈÌ G
• æ^•O æ&ã dÈ [ÁÁ , , Èæ&ã dÈ [}